QUALITY BUILT MEGAPHONE FOR INDOOR / OUTDOOR USE



PRECAUTIONS

- Ensure batteries are inserted the correct way round. Align the [-] marks on the batteries with the spring in the back cover.
- Use new batteries whenever possible as sound output is directly related to battery level status.
- Remove batteries from the megaphone when not in use.
- Press the 'ALARM' button to activate emergency siren/alarm.

DETAILED TECHNICAL DATA

Power Handling:	30WRMS
Construction Materials:	ABS
Audio Projection Range:	Up to 250 Meters
Battery Operated:	4xD Type Cells

OPERATING INSTRUCTIONS


- Open the back cover by pressing down on the 'Open' Button.
- Insert 4 x D batteries then close and lock the back cover.
- To activate the megaphone, press the ON/OFF button on the back cover.
- When using the megaphone place your lips as close as possible to the megaphone when speaking. Adjust the volumeto the desired level with out causing any feedback.



FEATURES

- Dynamic Microphone and High-Quality
- Speaker·Compact, Portable, and Durable
- Built-in Automatic Siren Function
- Adjustable Volume Control

TECHNICAL DRAWING

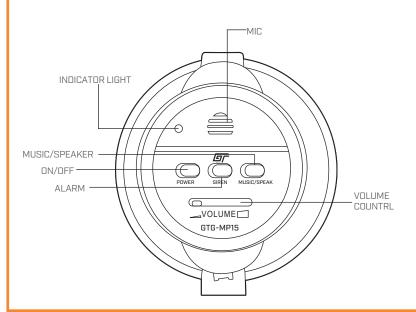

- Talk, Music, and Siren Switch
- Ergonomic Pistol Grip and Light-Weight Chassis
- Trusted & Used by U.S.Armed Forces
- For Indoor/Outdoor Use

Length:	255mm
Width:	160mm
Length Of the Handle:	99mm
Weight Approx:	0.52Kg

