



BASS FACE

Instruction Manual



MODEL

SD200.1

!Warning!

Bass Face products can produce sound pressure levels that can permanently damage your hearing. Please exercise extreme caution when setting volume levels. Also be mindful of other listeners, they might not enjoy listening at the same levels as you. We will not be held in any way responsible for injuries caused by the misuse of our products.

Please take care when attempting any alterations or installations with the electrical system of the car. ALWAYS disconnect the positive terminal at the battery.

Bass Face operates a policy of continuous improvement and reserves the right to update and alter the content and design of both product and instructions as it sees fit. Although the information contained in the instruction manuals is given in good faith based on extensive testing and experience the final responsibility for the installation and operation of your system must rest with the installer and the operator. If you are installing your equipment yourself please be realistic about your abilities and seek professional advice if you are unsure about any aspect of the task that you are undertaking.

If you face a particular problem with your installation or product we will be happy to answer your questions. Please email info@bassfaceaudio.co.uk - please note that our response time is 2 to 3 days, and that we are closed over the weekend. For more urgent help please contact your country distributor. In the UK this is Thompsons Ltd (www.thompsonsltd.co.uk)

Please note that Bass Face is unable to process warranty support directly. For warranty support you MUST contact your distributor.

Introduction:

Firstly, thank you for your purchase. Every element of this product has been optimised to give you the best possible performance for your money. We think that Bass Face represents the highest quality to price ratio available on the market today.

Please take the time to read these instructions carefully. You will need to follow them to have a successful install and get the most from the product.

Do remember that incorrect installation or abuse is NOT covered under warranty – it is YOUR responsibility to make sure that your installation and partnered product is suitable and compatible.

The SD200.1 is a fully featured car source unit with a fixed front panel and RCA outputs for system building. By following these guidelines we hope that you get the most from your unit.

Physically the unit conforms to the standard DIN size, although since there is no CD deck you will notice that the depth is less than many units, which can make installation easier.

The surround trim of the unit is removable which allows integration into vehicles where the dashboard surround itself becomes that trim. You can install the unit using side screws or with the provided cage.

The unit is pre fitted with a proper wiring harness and ISO female which can be plugged into many ISO compatible cars without further work.

IT IS ABSOLUTELY CRITICAL THAT YOU TEST THE VEHICLE ISO PLUG BEFORE YOU COMMIT TO PLUGGING IN YOUR NEW BASSFACE UNIT. MANY VEHICLES HAVE STRANGE AERIAL OR IGNITION SET UP'S WHICH CAN DAMAGE THE NEW RADIO OR THE CAR IF THE CONFIGURATION IS NOT ALTERED BEFORE THE UNIT IS POWERED UP.

Because there is a proper wiring harness, it is easy to cut the cables between the radio and the ISO plug and make changes without modifying the vehicle.

Please refer to the wiring diagram on the top of the radio for detailed colour instructions for the wires.

If you have to remove the ISO plug because you are installing the unit into a caravan or other vehicle that requires a bare ended cable setup then please pay extreme attention to the wiring. Use proper soldered or ratchet crimped connections and ensure that insulation is made in a correct and professional way. Note that the earth needs to be made really well to get the most out of the integrated amplifier. Note also that the unit needs to see power on the memory wire (yellow) AND power on the ignition switch wire (red) for it to power up. You can run up to 4 speakers at 4 ohms each off this unit. DO NOT attempt to run the unit with a nominal impedance of less than this value, otherwise non-warrantable damage can result. (ie leaving existing rear speakers connected when you add additional speakers in a parcel shelf etc)


Once the unit is installed and working you can refer to the following guidelines:



- 1 Power Button
- 2 Play/Pause Button
- 3 Mute Button
- 4 Clock Button
- 5 Mode / Preset Button (switches listening source / on radio sets a preset – press and hold for 1 second)
- 6 Intro Button (plays the first 10 seconds of each track)
- 7 Band Button (Access to each of the levels of FM presets)
- 8 Infra Red Eye
- 9 USB Slot
- 10 SD/MMC Slot
- 11 3.5mm Aux Input
- 12 Skip Track Back
- 13 Reset Button (hold for 5 seconds)
- 14 Skip Track Forward
- 15 Volume Knob

Remote control Operations

1. Power/off
2. Radio memory number
3. Scan
4. Band switching/Auto-search/
5. Volume increase
6. Previous song
7. Volume decrease
8. Next 10 songs
9. Sound effect setting
10. Switch mode
11. Mute
12. Random
13. Repeat
14. Clock
15. Next song
16. Next 10 songs

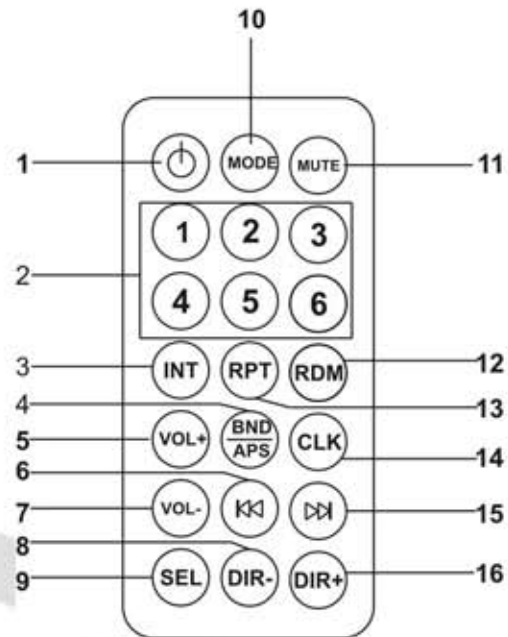

Basic Operation

Power/Mute Button:

Press once for power on. Once power is on, press again to put on/off mute. Hold button down to power off.

Volume Control / Sound Control:

Turn to control volume. Push in to cycle through sound options (BASS - TREBLE - FAD - BAL) Once display shows BASS/TREBLE etc. Turn to increase/decrease level.

MOD/APS Button:

This button is to change mode to Radio/SD MMC/USB

When is radio mode, hold down for 5 seconds to scan the radio stations that have been saved.

Radio/Track Forward and Back Buttons:

In Radio mode:

Press these buttons to search the radio, it will stop automatically when it gets to a station. Hold this button down to search manually, once left for 5 seconds, the unit will go back to automatic search function.

In MP3 Mode:

Press once to change track up/down hold down skip 10 tracks at a time.

EQ Button:

Press to cycle through the preset EQ modes (POP ROCK CLASSIC FLAT)

Clock Button:

Push to display current time. To set the time - when the time is displayed, hold the button down until the time starts flashing, then you can use the track forward and backward buttons to set the hours and minutes. To save, do not press any button for 5 seconds.

Reset Button:

This button can be used to reset the unit should it choose to misbehave in some way.



Wiring Diagram

5 BASS FACE

